How to Reconnect Your Epson Printer to WiFi

Replaced your router? Changed your network password? Moved your printer to a different room? This complete guide walks you through reconnecting your Epson printer to WiFi quickly and easily.

BEFORE YOU START

Common Mistakes to Avoid

Incorrect WiFi Password

Double-check your password before entering. This is the most common cause of connection failures.

Network Compatibility

Refer to your printer's user manual to verify it supports your network type (2.4GHz vs 5GHz).

Mid-Process Interruptions

Turning off the router or printer during setup resets everything. You'll need to start over.

Pre-Connection Checklist

Verify These Items First

- [ ] Your router is powered on and working properly
- [ ] You have your WiFi network name (SSID) and password ready
- [ ] Your Epson printer is turned on and ready to configure

1 METHOD 1

WPS Push Button Setup

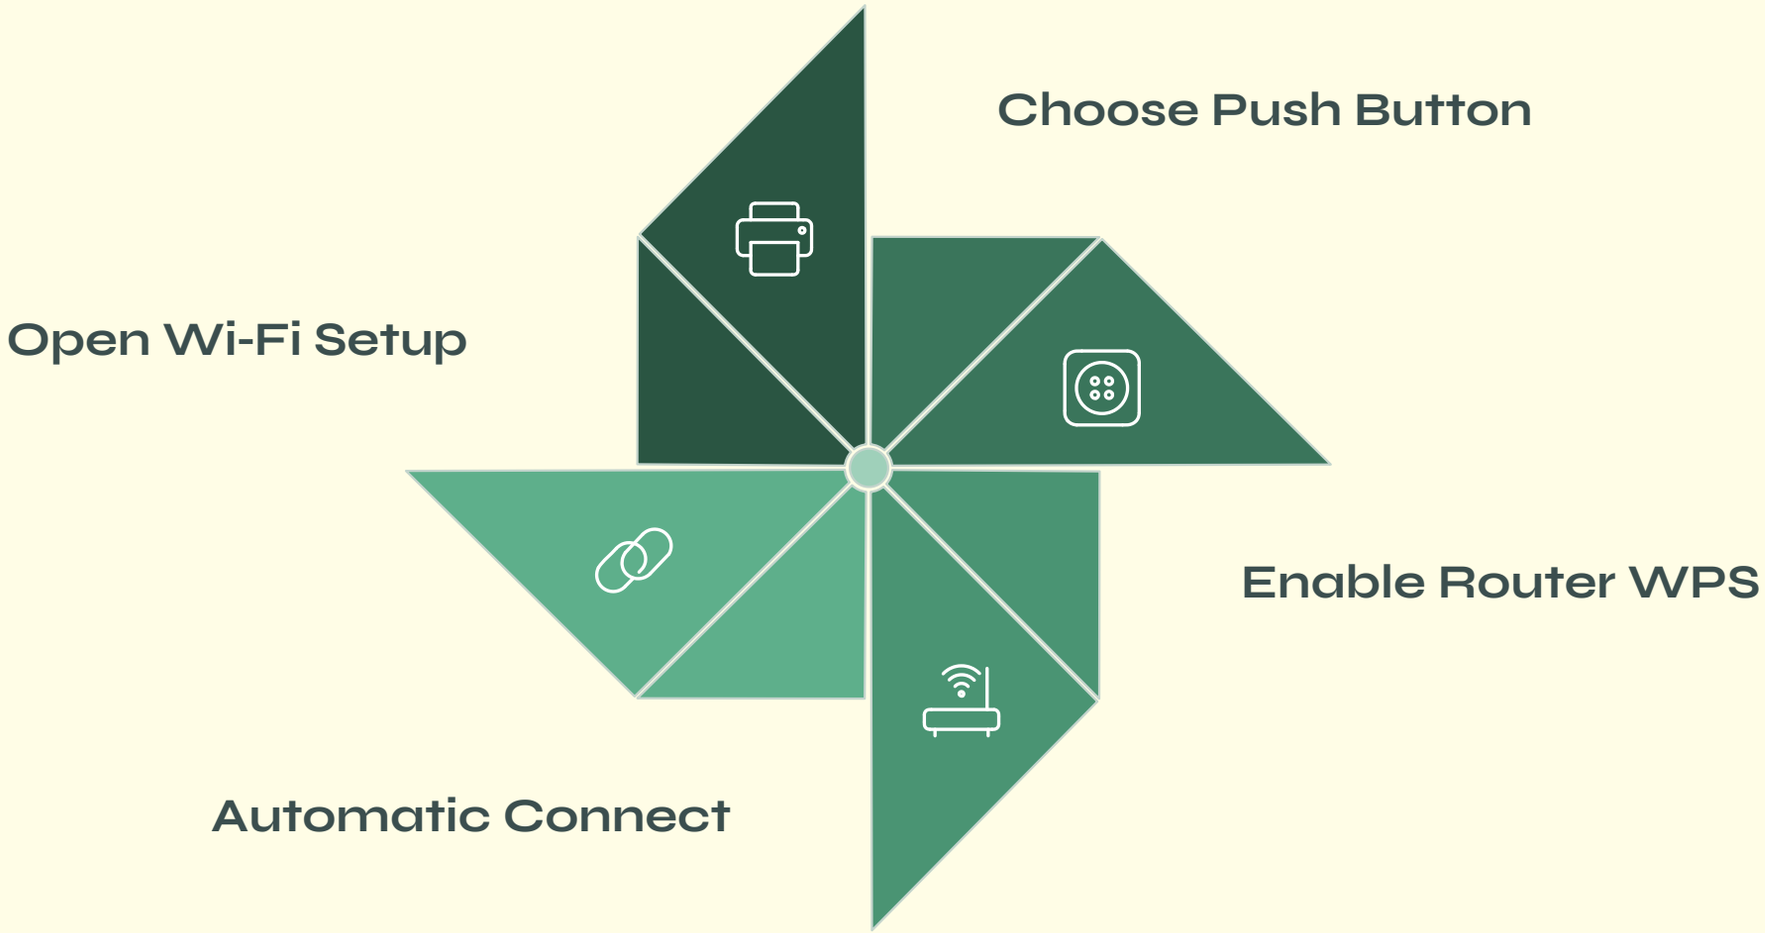

The fastest method if your router supports WPS. Both devices connect automatically without entering passwords.

2 METHOD 2

Using the Printer's Control Panel

01

Position & Access

Place printer near router. Press Home button, navigate to WiFi Setup or Network Settings, press OK.

02

Select Network

Choose WiFi Setup Wizard, press OK. Select your network name from the list, press OK.

03

Enter Password

Use on-screen keyboard to enter WiFi password, press OK. Wait for "Setup Complete" confirmation message.

3 METHOD 3

Epson Smart Panel App

Setup Steps

1. Download **Epson Smart Panel app** from Play Store or App Store
2. Enable WiFi and Bluetooth on your mobile device
3. Open app, tap (+) icon to add device
4. Follow on-screen steps to connect printer to network

After Connection

Once reconnection completes, install the Epson software on your computer to enable full printing functionality.

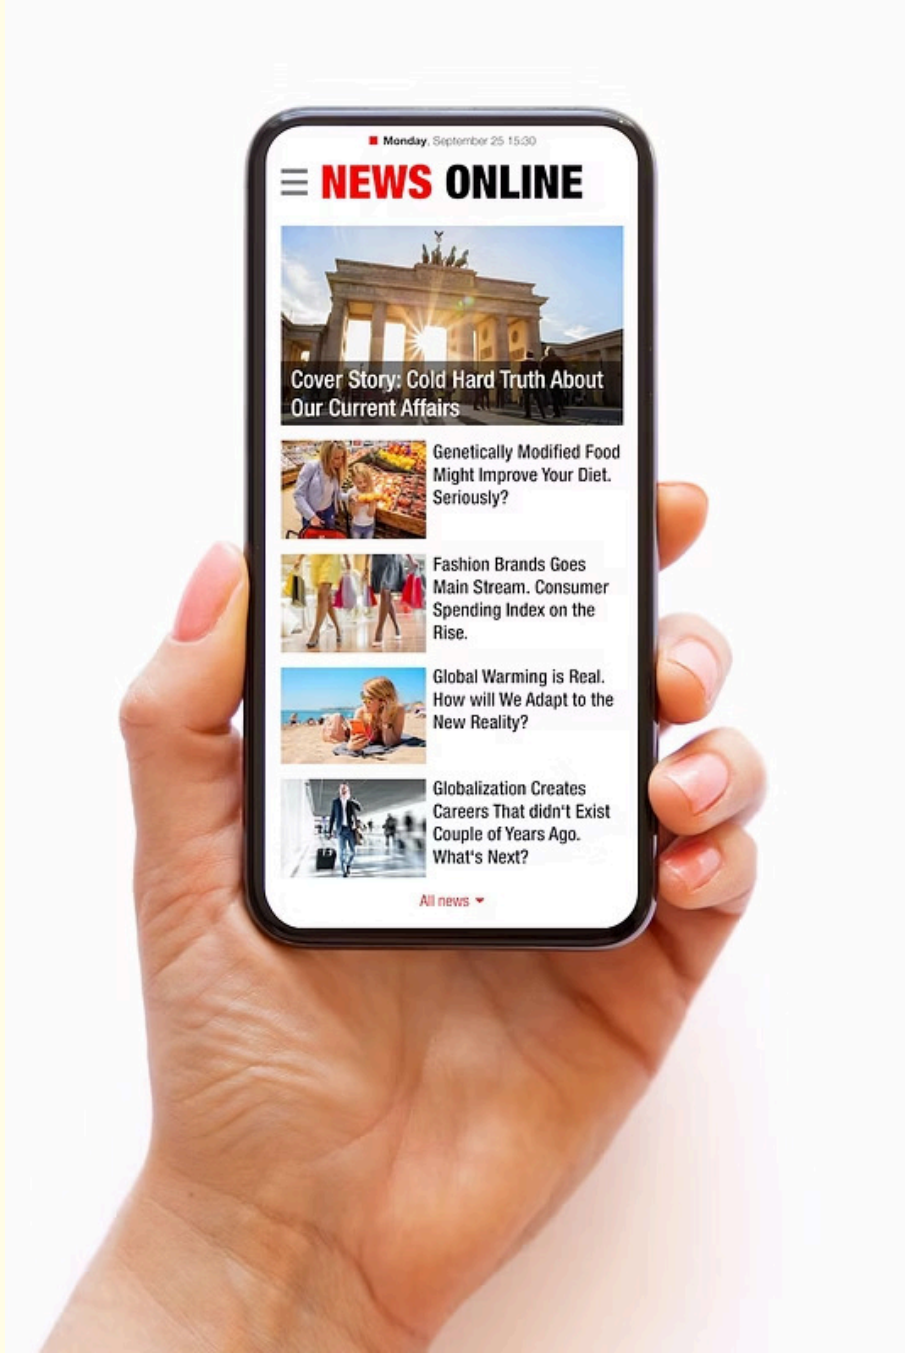
Monday, September 25 15:30
NEWS ONLINE
Cover Story: Cold Hard Truth About Our Current Affairs
Genetically Modified Food Might Improve Your Diet. Seriously?
Fashion Brands Goes Main Stream. Consumer Spending Index on the Rise.
Global Warming is Real. How will We Adapt to the New Reality?
Globalization Creates Careers That didn't Exist Couple of Years Ago. What's Next?
All news

Understanding WiFi Light Indicators

Solid Blue/Green

Successfully connected to wireless network (color varies by model)

Flashing Orange

Setup complete but can't connect—check for interference or distance issues

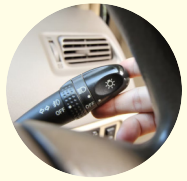

Fast Flashing Blue/Green

Actively communicating or connecting to a device

Slow Flashing Blue/Green

Connection in progress or error occurred—restart device

Preventing Future WiFi Issues

Keep Software Updated

Regularly update printer drivers and firmware for optimal performance

Optimize Placement

Position printer near router for strong, consistent signal strength

Regular Restarts

Restart printer and router periodically to maintain stable connections

Minimize Interference

Reduce network congestion from multiple devices competing for bandwidth

Clear Print Queues

Remove stuck print jobs to prevent offline status issues

Frequently Asked Questions

Reconnecting via Phone?

Reset network settings, download Epson Smart Panel app, connect phone to WiFi, select printer in app, enter password.

No Display Screen?

Press WPS button on router, hold printer's WiFi button until lights flash, use Epson Smart Panel app to complete setup.

Printer Won't Find Network?

Router may be too far away, network could be hidden, or printer doesn't support 5GHz networks.

Check Connection Status?

Look for solid WiFi light on printer or print a network status report from settings menu.

You're All Set!

Reconnecting your Epson printer to WiFi is straightforward with these methods. Whether using the control panel, WPS setup, or Epson Smart Panel app, you now have the tools to get your printer back online quickly.

Keep your network details handy and follow these prevention tips to maintain a stable connection for uninterrupted printing.

View Full Guide